

Trouble Shooting

Location of fault is the starting point for carrying out repairs. Step wise checking is

Sr.No.	Observation /Fault	Cause
1	Vehicle not moving freely.Gives sound Check without switching on. Check both Wheels one by one ,lift above ground. Spin/rotate the wheels by hand.	Breaks malfunction
		Bearings malfunction
		Water entered inside Motor
2	Vehicle not moving Vehicle not Central stand.No display on display panel when turning ON the Power switch	Power lock defective
		Fuse blown off
		MCB tripped
		Display panel bulb(s) fused
3	Vehicle not moving On turning ON the Power switch,display Panel shows low level of Battery charge	Battery discharged
4	After rectifying the above, turn on the power and twist the accelerator, no movement of the rear wheel	Defective Motor or Accelerator or Controller or Main wiring Harness

If after passing the above steps ,the defect is not located ,the major electrical parts may be tested. Special test equipments developed by Fleeto e-Vehicle are required which are available with

: detailed below

Remedy

Check & rectify fouling of front and rear Brakes
Check for Bearing condition and rectify or replace bearings.
Check and replace the Power lock
Replace the fuse
Switch on the MCB
Check and replace the blub (s)
Recharge the Battery
Test the main circuit and parts

ested after disassembling of the panels.
the Authorised Dealers.